ESP32-C3 esp-dev-kits Documentation



Release master Espressif Systems Jul 19, 2025

Table of contents

Ta	Table of contents i				
1	ESP	32-C3-D	evKitC-02	3	
-	1.1		-C3-DevKitC-02	3	
		1.1.1	Getting Started	4	
		1.1.2	Hardware Reference	5	
		1.1.3	Hardware Revision Details	7	
		1.1.4	Related Documents	7	
2	ESP:	32-C3-D	evKitM-1	9	
	2.1	ESP32-	-C3-DevKitM-1	9	
		2.1.1	Getting Started	9	
		2.1.2	Hardware Reference	11	
		2.1.3		13	
		2.1.4	Related Documents	14	
3	ESP:	32-C3-L	CDkit	15	
	3.1	ESP32-	-C3-LCDkit	15	
		3.1.1	Board Overview	15	
		3.1.2	Start Application Development	18	
		3.1.3	Hardware Reference	20	
		3.1.4	Hardware Revision Details	24	
		3.1.5	Sample Request	24	
		3.1.6	Related Documents	24	
4	Rela	ted Docu	imentation and Resources	33	
	4.1	Related	Documentation	33	
	4.2	Develop	per Zone	33	
	4.3	Product	ts	34	
	4.4	Contact	t Us	34	
5	Disc	laimer ai	nd Copyright Notice	35	

5 Disclaimer and Copyright Notice

This document provides detailed user guides and examples for ESP32-C3 series development boards.

Note: For the full list of Espressif development boards, please go to ESP DevKits.

Chapter 1

ESP32-C3-DevKitC-02

ESP32-C3-DevKitC-02 is an entry-level development board based on ESP32-C3-WROOM-02 or ESP32-C3-WROOM-02U, general-purpose modules with 4 MB SPI flash. This board integrates complete Wi-Fi and Bluetooth® Low Energy functions.

1.1 ESP32-C3-DevKitC-02

This user guide will help you get started with ESP32-C3-DevKitC-02 and will also provide more in-depth information.

ESP32-C3-DevKitC-02 is an entry-level development board based on ESP32-C3-WROOM-02 or ESP32-C3-WROOM-02U, general-purpose modules with 4 MB SPI flash. This board integrates complete Wi-Fi and Bluetooth® Low Energy functions.

Most of the I/O pins are broken out to the pin headers on both sides for easy interfacing. Developers can either connect peripherals with jumper wires or mount ESP32-C3-DevKitC-02 on a breadboard.



Fig. 1: ESP32-C3-DevKitC-02

The document consists of the following major sections:

- Getting Started: Overview of ESP32-C3-DevKitC-02 and hardware/software setup instructions to get started.
- *Hardware Reference*: More detailed information about the ESP32-C3-DevKitC-02' s hardware.
- Hardware Revision Details: Revision history, known issues, and links to user guides for previous versions (if any) of ESP32-C3-DevKitC-02.
- Related Documents: Links to related documentation.

1.1.1 Getting Started

This section provides a brief introduction of ESP32-C3-DevKitC-02, instructions on how to do the initial hardware setup and how to flash firmware onto it.

Description of Components



Fig. 2: ESP32-C3-DevKitC-02 (with the ESP32-C3-WROOM-02 module) - front

The key components of the board are described in a counter-clockwise direction.

Key Component	Description
ESP32-C3-WROOM-02 or	ESP32-C3-WROOM-02 and ESP32-C3-WROOM-02U are powerful and
ESP32-C3-WROOM-02U	general-purpose Espressif modules that offer Wi-Fi and Bluetooth Low En-
	ergy coexistence. ESP32-C3-WROOM-02 has a PCB antenna, while ESP32-
	C3-WROOM-02U has an external antenna connector. They both integrate a
	4 MB SPI flash.
5 V to 3.3 V LDO	Power regulator that converts a 5 V supply into a 3.3 V output.
5 V Power On LED	Turns on when the USB power is connected to the board.
Pin Headers	All available GPIO pins (except for the SPI bus for flash) are broken out to the
	pin headers on the board. For details, please see Header Block.
Boot Button	Download button. Holding down Boot and then pressing Reset initiates
	Firmware Download mode for downloading firmware through the serial port.
Micro-USB Port	USB interface. Power supply for the board as well as the communication in-
	terface between a computer and the ESP32-C3 chip.
Reset Button	Press this button to restart the system.
USB-to-UART Bridge	Single USB-to-UART bridge chip provides transfer rates up to 3 Mbps.
RGB LED	Addressable RGB LED, driven by GPIO8.

Espressif Systems

Start Application Development

Before powering up your ESP32-C3-DevKitC-02, please make sure that it is in good condition with no obvious signs of damage.

Required Hardware

- ESP32-C3-DevKitC-02
- USB 2.0 cable (Standard-A to Micro-B)
- Computer running Windows, Linux, or macOS

Note: Be sure to use an appropriate USB cable. Some cables are for charging only and do not provide the needed data lines nor work for programming the boards.

Software Setup Please proceed to ESP-IDF Get Started, which will quickly help you set up the development environment then flash an application example onto your board.

Contents and Packaging

Retail Orders If you order a few samples, each ESP32-C3-DevKitC-02 comes in an individual package in either antistatic bag or any packaging depending on your retailer.

For retail orders, please go to https://www.espressif.com/en/contact-us/get-samples.

Wholesale Orders If you order in bulk, the boards come in large cardboard boxes.

For wholesale orders, please check Espressif Product Ordering Information (PDF)

1.1.2 Hardware Reference

Block Diagram

The block diagram below shows the components of ESP32-C3-DevKitC-02 and their interconnections.





Power Supply Options There are three mutually exclusive ways to provide power to the board:

- Micro-USB Port, default power supply
- 5V and GND pin headers
- 3V3 and GND pin headers

J1

It is recommended to use the first option: Micro-USB Port.

Header Block

The two tables below provide the **Name** and **Function** of the pin headers on both sides of the board (J1 and J3). The pin header names are shown in *ESP32-C3-DevKitC-02* (*with the ESP32-C3-WROOM-02 module*) - *front*. The numbering is the same as in the ESP32-C3-DevKitC-02 Schematic (PDF).

No.	Name	Type ¹	Function
1	G	G	Ground
2	3V3	Р	3.3 V power supply
3	3V3	Р	3.3 V power supply
4	RST	Ι	CHIP_PU
5	G	G	Ground
6	4	I/O/T	GPIO4, ADC1_CH4, FSPIHD, MTMS
7	5	I/O/T	GPIO5, ADC2_CH0, FSPIWP, MTDI
8	6	I/O/T	GPIO6, FSPICLK, MTCK
9	7	I/O/T	GPIO7, FSPID, MTDO
10	G	G	Ground
11	8	I/O/T	GPIO8 ² , RGB LED
12	9	I/O/T	GPIO9 ²
13	5V	Р	5 V power supply
14	5V	Р	5 V power supply
15	G	G	Ground

J3

No.	Name	Type?	Function
1	G	G	Ground
2	0	I/O/T	GPIO0, ADC1_CH0, XTAL_32K_P
3	1	I/O/T	GPIO1, ADC1_CH1, XTAL_32K_N
4	2	I/O/T	GPIO2 ² , ADC1_CH2, FSPIQ
5	3	I/O/T	GPIO3, ADC1_CH3
6	G	G	Ground
7	10	I/O/T	GPIO10, FSPICS0
8	G	G	Ground
9	RX	I/O/T	GPIO20, U0RXD
10	TX	I/O/T	GPIO21, U0TXD
11	G	G	Ground
12	18	I/O/T	GPIO18, USB_D-
13	19	I/O/T	GPIO19, USB_D-
14	G	G	Ground
15	G	G	Ground

Pin Layout

¹ P: Power supply; I: Input; O: Output; T: High impedance.

² GPIO2, GPIO8, and GPIO9 are strapping pins of the ESP32-C3 chip. These pins are used to control several chip functions depending on binary voltage values applied to the pins during chip power-up or system reset. For description and application of the strapping pins, please refer to Section Boot Configurations in ESP32-C3 Datasheet.



Fig. 4: ESP32-C3-DevKitC-02 Pin Layout (with the ESP32-C3-WROOM-02 module, click to enlarge)

1.1.3 Hardware Revision Details

No previous versions available.

1.1.4 Related Documents

- ESP32-C3 Datasheet (PDF)
- ESP32-C3-WROOM-02 & ESP32-C3-WROOM-02U Datasheet (PDF)
- ESP32-C3-DevKitC-02 Schematic (PDF)
- ESP32-C3-DevKitC-02 PCB Layout (PDF)
- ESP32-C3-DevKitC-02 Dimensions (PDF)
- ESP32-C3-DevKitC-02 Dimensions source file (DXF) You can view it with Autodesk Viewer online

For further design documentation for the board, please contact us at sales@espressif.com.

Chapter 2

ESP32-C3-DevKitM-1

ESP32-C3-DevKitM-1 is an entry-level development board based on ESP32-C3-MINI-1 or ESP32-C3-MINI-1U, modules named for its small size. This board integrates complete Wi-Fi and Bluetooth® Low Energy functions.

2.1 ESP32-C3-DevKitM-1

This user guide will help you get started with ESP32-C3-DevKitM-1 and will also provide more in-depth information.

ESP32-C3-DevKitM-1 is an entry-level development board based on ESP32-C3-MINI-1 or ESP32-C3-MINI-1U modules, which are named for their compact size. This board integrates complete Wi-Fi and Bluetooth® Low Energy functions.

Most of the I/O pins on the module are broken out to the pin headers on both sides of this board for easy interfacing. Developers can either connect peripherals with jumper wires or mount ESP32-C3-DevKitM-1 on a breadboard.

The document consists of the following major sections:

- Getting Started: Overview of ESP32-C3-DevKitM-1 and hardware/software setup instructions to get started.
- Hardware Reference: More detailed information about the ESP32-C3-DevKitM-1' s hardware.
- *Hardware Revision Details*: Revision history, known issues, and links to user guides for previous versions (if any) of ESP32-C3-DevKitM-1.
- Related Documents: Links to related documentation.

2.1.1 Getting Started

This section provides a brief introduction of ESP32-C3-DevKitM-1, instructions on how to do the initial hardware setup and how to flash firmware onto it.

Description of Components

The key components of the board are described in a counter-clockwise direction.



Fig. 1: ESP32-C3-DevKitM-1



Fig. 2: ESP32-C3-DevKitM-1 (with the ESP32-C3-MINI-1 module) - front

Key Component	Description
ESP32-C3-MINI-1 or ESP32-	ESP32-C3-MINI-1 and ESP32-C3-MINI-1U are general-purpose Wi-Fi and
C3-MINI-1U	Bluetooth Low Energy combo modules. ESP32-C3-MINI-1 comes with an
	on-board PCB antenna, whereas ESP32-C3-MINI-1U comes with an external
	antenna connector. They both have a flash of 4 MB, integrated inside the chip'
	s package.
5 V to 3.3 V LDO	Power regulator that converts a 5 V supply into a 3.3 V output.
5 V Power On LED	Turns on when the USB power is connected to the board.
Pin Headers	All available GPIO pins (except for the SPI bus for flash) are broken out to the
	pin headers on the board. For details, please see Header Block.
Boot Button	Download button. Holding down Boot and then pressing Reset initiates
	Firmware Download mode for downloading firmware through the serial port.
Micro-USB Port	USB interface. Power supply for the board as well as the communication in-
	terface between a computer and the ESP32-C3 series of chips.
Reset Button	Press this button to restart the system.
USB-to-UART Bridge	Single USB-UART bridge chip provides transfer rates up to 3 Mbps.
RGB LED	Addressable RGB LED, driven by GPIO8.

Start Application Development

Before powering up your ESP32-C3-DevKitM-1, please make sure that it is in good condition with no obvious signs of damage.

Required Hardware

- ESP32-C3-DevKitM-1
- USB 2.0 cable (Standard-A to Micro-B)
- Computer running Windows, Linux, or macOS

Note: Be sure to use an appropriate USB cable. Some cables are for charging only and do not provide the needed data lines nor work for programming the boards.

Software Setup Please proceed to ESP-IDF Get Started, which will quickly help you set up the development environment then flash an application example onto your board.

Contents and Packaging

Retail Orders If you order one or several samples, each ESP32-C3-DevKitM-1 comes in an individual package in either antistatic bag or any packaging depending on your retailer.

For retail orders, please go to https://www.espressif.com/en/contact-us/get-samples.

Wholesale Orders If you order in bulk, the boards come in large cardboard boxes.

For wholesale orders, please check Espressif Product Ordering Information (PDF)

2.1.2 Hardware Reference

Block Diagram

The block diagram below shows the components of ESP32-C3-DevKitM-1 and their interconnections.



Fig. 3: ESP32-C3-DevKitM-1 (click to enlarge)

Power Supply Options There are three mutually exclusive ways to provide power to the board:

- Micro-USB Port, default power supply
- 5V and GND pin headers
- 3V3 and GND pin headers

J1

It is recommended to use the first option: Micro-USB Port.

Header Block

The two tables below provide the **Name** and **Function** of the pin headers on both sides of the board (J1 and J3). The pin header names are shown in *ESP32-C3-DevKitM-1 (with the ESP32-C3-MINI-1 module) - front*. The numbering is the same as in the ESP32-C3-DevKitM-1 Schematic (PDF).

No.	Name	Type ¹	Function
1	GND	G	Ground
2	3V3	Р	3.3 V power supply
3	3V3	Р	3.3 V power supply
4	IO2	I/O/T	GPIO2 ² , ADC1_CH2, FSPIQ
5	IO3	I/O/T	GPIO3, ADC1_CH3
6	GND	G	Ground
7	RST	Ι	CHIP_PU
8	GND	G	Ground
9	IO0	I/O/T	GPIO0, ADC1_CH0, XTAL_32K_P
10	IO1	I/O/T	GPIO1, ADC1_CH1, XTAL_32K_N
11	IO10	I/O/T	GPIO10, FSPICS0
12	GND	G	Ground
13	5V	Р	5 V power supply
14	5V	Р	5 V power supply
15	GND	G	Ground

¹ P: Power supply; I: Input; O: Output; T: High impedance.

² GPIO2, GPIO8, and GPIO9 are strapping pins of the ESP32-C3 series of chips. These pins are used to control several chip functions depending on binary voltage values applied to the pins during chip power-up or system reset. For description and application of the strapping pins, please refer to Section Boot Configurations in ESP32-C3 Datasheet.

.13				
0-	No.	Name	Type [?]	Function
	1	GND	G	Ground
	2	TX	I/O/T	GPIO21, U0TXD
	3	RX	I/O/T	GPIO20, U0RXD
	4	GND	G	Ground
	5	IO9	I/O/T	GPIO9 ²
	6	IO8	I/O/T	GPIO8 ² , RGB LED
	7	GND	G	Ground
	8	IO7	I/O/T	GPIO7, FSPID, MTDO
	9	IO6	I/O/T	GPIO6, FSPICLK, MTCK
	10	IO5	I/O/T	GPIO5, ADC2_CH0, FSPIWP, MTDI
	11	IO4	I/O/T	GPIO4, ADC1_CH4, FSPIHD, MTMS
	12	GND	G	Ground
	13	IO18	I/O/T	GPIO18, USB_D-
	14	IO19	I/O/T	GPIO19, USB_D+
	15	GND	G	Ground

ESP32-C3-DevKitM-1





Fig. 4: ESP32-C3-DevKitM-1 Pin Layout (with the ESP32-C3-MINI-1 module, click to enlarge)

Pin Layout

2.1.3 Hardware Revision Details

No previous versions available.

2.1.4 Related Documents

- ESP32-C3 Datasheet (PDF)
- ESP32-C3-MINI-1 & ESP32-C3-MINI-1U Datasheet (PDF)
- ESP32-C3-DevKitM-1 Schematic (PDF)
- ESP32-C3-DevKitM-1 PCB Layout (PDF)
- ESP32-C3-DevKitM-1 Dimensions (PDF)
- ESP32-C3-DevKitM-1 Dimensions source file (DXF)

For further design documentation for the board, please contact us at sales@espressif.com.

Chapter 3

ESP32-C3-LCDkit

ESP32-C3-LCDkit is a development board designed for wildlife protection. It is used to evaluate and verify the application of the ESP32-C3 screen. And it is composed of mainboard and subboard.

3.1 ESP32-C3-LCDkit

This user guide will help you get started with ESP32-C3-LCDkit and will also provide more in-depth information.

The document consists of the following sections:

- Board Overview: Overview of the board hardware/software.
- *Start Application Development*: How to set up hardware/software to develop applications.
- *Hardware Reference*: More detailed information about the board's hardware.
- Hardware Revision Details: This is the first revision of this board released.
- Sample Request: How to get a sample board.
- Related Documents: Links to related documentation.

3.1.1 Board Overview

ESP32-C3-LCDkit is an ESP32-C3-based evaluation development board with an SPI interface display. It also has an integrated rotary encoder switch and features screen interaction. Due to its low cost, low power consumption, and high performance, ESP32-C3 satisfies the basic GUI interaction needs, gaining ground in scenarios with small screen sizes.

Feature List

The main features of the board are listed below:

- Module Embedded: ESP32-C3-MINI-1 module with 4 MB flash and 400 KB SRAM
- **Display:** Compatibility with various subboards and support for displays with I2C and SPI interfaces. Please refer to *LCD Subboards* for more information
- Rotary Encoder Switch: Key switches and 360° rotation for on-screen GUI control
- Infrared module: Infrared transmitter and infrared receiver for infrared wireless control
- Audio: On-board audio amplifier and speaker for audio playback
- USB: USB Type-C download/debug



Fig. 1: ESP32-C3-LCDkit with ESP32-C3-MINI-1 Module

Block Diagram



The block diagram below shows the components of ESP32-C3-LCDkit and their interconnections.

Fig. 2: ESP32-C3-LCDkit Block Diagram (Click to Enlarge)

Description of Components

ESP32-C3-LCDkit is a development board designed for wildlife protection. It contains a mainboard and a subboard.

Mainboard ESP32-C3-LCDkit_MB is the core of the kit, which integrates the ESP32-C3-MINI-1 module and provides ports for connection to the LCD subboard.



Fig. 3: ESP32-C3-LCDkit - Front (Click to Enlarge)

The key components of the board are described in a clockwise direction.

Key Component	Description
ESP32-C3-MINI-1 Module	ESP32-C3-MINI-1 is a generic Wi-Fi + Bluetooth LE MCU module that is
	built around the ESP32-C3 series of SoCs. It is integrated with 4 MB flash and
	400 KB SRAM.
UART & RGB Expander I/O	Connects the system power supply pins and UART and RGB data pins via a
	2.54 mm pitch pin header.
RGB LED	Supports configuring the RGB LED display to indicate status or behavior.
Speaker	Supports speaker playback through an audio power amplifier.
LCD Display Connector	Connects the 1.28" LCD subboard via a 2.54 mm pitch female header.
USB Power Port	Provides power to the entire system. It is recommended to use at least a 5V/2A
	power adapter to ensure a stable power supply. Used for USB communication
	between the PC side and the ESP32-C3-MINI-1 module.
Reset Button	Press this button to reset the system.
5V-to-3.3V LDO	Low Dropout Regulator (LDO).
3.3 V Power On LED	Indicates the status of the system power supply.
EC11 Rotary Encoder Switch	Features both a 360° rotary encoder and a key switch to enable control of the
	on-screen GUI.
Speaker PA Chip	Supports speaker playback.
Infrared RX	Receives external infrared signals.
Infrared TX/RX I/O Select	Select the infrared RX/TX function via a 2.54 mm pitch pin header and jumper
	caps.
Infrared TX	Sends out infrared signals.

LCD Subboards The **ESP32-C3-LCDkit_DB** subboard supports a 1.28" LCD screen with SPI interface and 240x240 resolution. The driver chip used for this screen is GC9A01.

Software Support

The ESP32-C3-LCDkit development framework is ESP-IDF. ESP-IDF is a FreeRTOS-based SoC development framework with a bunch of components including LCD, ADC, RMT, and SPI. An example is provided for ESP32-C3-LCDkit under the folder Examples. You can configure project options by entering idf.py menuconfig in the example directory.

3.1.2 Start Application Development

This section provides instructions on how to do hardware and software setup and flash firmware onto the board to develop your own application.

Required Hardware

- 1 x ESP32-C3-LCDkit_MB
- 1 x LCD subboard
- 1 x USB 2.0 cable (standard Type-A to Type-C)
- 1 x PC (Windows, Linux, or macOS)

Note: Please make sure to use the appropriate USB cable. Some cables can only be used for charging, not for data transfer or program flashing.

Hardware Setup

Prepare the board for loading of the first sample application:



Fig. 4: ESP32-C3-LCDkit_DB - Front (Click to Enlarge)



Fig. 5: ESP32-C3-LCDkit_DB - Back (Click to Enlarge)

- 1. Connect the LCD subboard to the LCD Display Connector.
- 2. Plug in the USB cable to connect the PC with the board.
- 3. The LCD lights up and you can now control GUI through the rotary encoder switch.

Now the board is ready for software setup.

Software Setup

To learn how to quickly set up your development environment, please go to Get Started > Installation.

For more software information on developing applications, please go to Software Support.

3.1.3 Hardware Reference

This section provides more detailed information about the board's hardware.

GPIO Allocation

The table below provides the allocation of GPIOs exposed on terminals of ESP32-C3-MINI-1 module to control specific components or functions of the board.

Pin	Pin Name	Function
1	GND	Ground
2	GND	Ground

Table 1: ESP32-C3-MINI-1 GPIO Allocation

continues on next page

Pin	Pin Name	Function
3	3V3	3.3 V power supply
4	NC	No connection
5	IO2	LCD_D/C
6	IO3	AUDIO_PA
7	NC	No connection
8	EN	Reset
9	NC	No connection
10	NC	No connection
11	GND	Ground
12	IO0	LCD_SDA
13	IO1	LCD_SCL
14	GND	Ground
15	NC	No connection
16	IO10	ENCODER_A
17	NC	No connection
18	IO4	IR_RX/IR_TX
19	IO5	LCD_BL_CTRL
20	IO6	ENCODER_A
21	IO7	LCD_CS
22	IO8	RGB_LED
23	IO9	ENCODER_SW
24	NC	No connection
25	NC	No connection
26	IO18	USB_DN
27	IO19	USB_DP
28	NC	No connection
29	NC	No connection
30	RXD0	Reserved
31	TXD0	Reserved
32-35	NC	No connection
36-53	GND	Ground

Table 1 – continued from previous page

Power Distribution

The development board is powered via the USB-to-USB port:

Output system power supply:

Infrared TX/RX Select

Since the Infrared TX and Infrared RX modules share the same signal line on the chip, it is required to short-circuit specific pins in Infrared TX/RX Select Port via jumper caps to choose between the TX/RX function:

C6 Module Compatibility Design

ESP32-C3-LCDkit development board uses the ESP32-C3-MINI-1 module by default, with resistors R2, R4, R5, and R35 connected to the mainboard:

The development board is also designed to be compatible with the ESP32-C6-MINI-1 module, where resistors R2, R4, R5, and R35 need to be removed and resistors R13 and R14 need to be connected.



Fig. 6: ESP32-C3-LCDkit - USB-to-USB Power Supply

3V3 LDO



Fig. 7: ESP32-C3-LCDkit - System Power Supply

IR Receiver







Fig. 9: ESP32-C3-LCDkit - Infrared TX Module





Hardware Setup Options

Automatic Download After the development board is powered on, press the rotary encoder switch and Reset button, then release Reset first and the encoder second, to put the ESP development board into download mode.

3.1.4 Hardware Revision Details

• ESP32-C3-LCD-Ev-Board: This older-version board is an engineering sample and is minimally maintained by Espressif. For historical documentation for this board, please refer to *ESP32-C3-LCD-Ev-Board User Guide*.

3.1.5 Sample Request

ESP32-C3 is a cost-effective and industry-leading low-power performance solution for building rotary or small displays driven by an SPI interface. For sample requests, please contact us at sales@espressif.com.

3.1.6 Related Documents

Please download the following documents from the HTML version of esp-dev-kits Documentation.

- ESP32-C3 Datasheet
- ESP32-C3-MINI-1 Datasheet
- ESP Product Selector
- ESP32-C3-LCDkit_MB Schematics
- ESP32-C3-LCDkit_MB PCB Layout
- ESP32-C3-LCDkit_DB Schematics
- ESP32-C3-LCDkit_DB PCB Layout
- ESP32-C6-LCDkit_DB Schematics
- ESP32-C6-LCDkit_DB PCB Layout
- 1.28_TFT_240x240_SPI_Display
- Infrared Transmitter (IR67-21CTR8)
- Infrared Receiver (IRM-H638TTR2)
- Audio Amplifier (NS4150)
- RGB LED (WS2812B)
- 2415 Voice Cavity Horn

For further design documentation for the board, please contact us at sales@espressif.com.

ESP32-C3-LCD-Ev-Board

This user guide will help you get started with ESP32-C3-LCD-Ev-Board and will also provide more in-depth information.

The document consists of the following sections:

- Board Overview: Overview of the board hardware/software.
- Start Application Development: How to set up hardware/software to develop applications.
- *Hardware Reference*: More detailed information about the board's hardware.
- Hardware Revision Details: This is the first revision of this board released.
- *Sample Request*: How to get a sample board.
- Related Documents: Links to related documentation.

Board Overview ESP32-C3-LCD-Ev-Board is an ESP32-C3-based evaluation development board with an SPI interface display. It also has an integrated rotary encoder switch and features screen interaction. Due to its low cost, low power consumption, and high performance, ESP32-C3 satisfies the basic GUI interaction needs, gaining ground in scenarios with small screen sizes.



Fig. 11: ESP32-C3-LCD-Ev-Board with ESP32-C3-MINI-1 Module

Feature List The main features of the board are listed below:

- Module Embedded: ESP32-C3-MINI-1 module with 4 MB flash and 400 KB SRAM
- **Display:** Compatibility with various subboards and support for displays with I2C and SPI interfaces. Please refer to *LCD Subboards* for more information
- Rotary Encoder Switch: Key switches and 360° rotation for on-screen GUI control
- USB: USB Type-C download/debug



Block Diagram The block diagram below shows the components of ESP32-C3-LCD-Ev-Board and their interconnections.

Fig. 12: ESP32-C3-LCD-Ev-Board Block Diagram (Click to Enlarge)

Description of Components The ESP32-C3-LCD-Ev-Board development board consists of a mainboard and a subboard.

Mainboard ESP32-C3-LCD-Ev-Board_MB is the core of the kit, which integrates the ESP32-C3-MINI-1 module and provides ports for connection to the LCD subboard.

The key components of the board are described in a counter-clockwise direction.

ESP32-C3-MINI-1 ModuleESP32-C3-MINI-1 is a generic Wi-Fi + Bluetooth LE MCU module that is built around the ESP32-C3 series of SoCs. It is integrated with 4 MB flash and 400 KB SRAM.Reset ButtonPress this button to reset the system.Reserved IO ConnectorConnects the system power supply pins and some reserved module pins via a 2.54 mm pitch connector.LEDSupports configuring the RGB LED display to indicate status or behavior.ESP-Prog ConnectorConnects the Program interface of ESP-Prog for firmware download and de- bugging via a 1.27 mm pitch connector.Power SwitchPower Toggle ON/OFF: Toggle ON to power on the board and OFF to power off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial		
built around the ESP32-C3 series of SoCs. It is integrated with 4 MB flash and 400 KB SRAM.Reset ButtonPress this button to reset the system.Reserved IO ConnectorConnects the system power supply pins and some reserved module pins via a 2.54 mm pitch connector.LEDSupports configuring the RGB LED display to indicate status or behavior.ESP-Prog ConnectorConnects the Program interface of ESP-Prog for firmware download and de- bugging via a 1.27 mm pitch connector.Power SwitchPower Toggle ON/OFF: Toggle ON to power on the board and OFF to power off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial	Key Component	Description
400 KB SRAM.Reset ButtonPress this button to reset the system.Reserved IO ConnectorConnects the system power supply pins and some reserved module pins via a 2.54 mm pitch connector.LEDSupports configuring the RGB LED display to indicate status or behavior.ESP-Prog ConnectorConnects the Program interface of ESP-Prog for firmware download and de- bugging via a 1.27 mm pitch connector.Power SwitchPower Toggle ON/OFF: Toggle ON to power on the board and OFF to power off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial	ESP32-C3-MINI-1 Module	ESP32-C3-MINI-1 is a generic Wi-Fi + Bluetooth LE MCU module that is
Reset ButtonPress this button to reset the system.Reserved IO ConnectorConnects the system power supply pins and some reserved module pins via a 2.54 mm pitch connector.LEDSupports configuring the RGB LED display to indicate status or behavior.ESP-Prog ConnectorConnects the Program interface of ESP-Prog for firmware download and de- bugging via a 1.27 mm pitch connector.Power SwitchPower Toggle ON/OFF: Toggle ON to power on the board and OFF to power off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial		built around the ESP32-C3 series of SoCs. It is integrated with 4 MB flash and
Reserved IO ConnectorConnects the system power supply pins and some reserved module pins via a 2.54 mm pitch connector.LEDSupports configuring the RGB LED display to indicate status or behavior.ESP-Prog ConnectorConnects the Program interface of ESP-Prog for firmware download and de- bugging via a 1.27 mm pitch connector.Power SwitchPower Toggle ON/OFF: Toggle ON to power on the board and OFF to power off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial		400 KB SRAM.
2.54 mm pitch connector.LEDSupports configuring the RGB LED display to indicate status or behavior.ESP-Prog ConnectorConnects the Program interface of ESP-Prog for firmware download and debugging via a 1.27 mm pitch connector.Power SwitchPower Toggle ON/OFF: Toggle ON to power on the board and OFF to power off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial	Reset Button	Press this button to reset the system.
LEDSupports configuring the RGB LED display to indicate status or behavior.ESP-Prog ConnectorConnects the Program interface of ESP-Prog for firmware download and de- bugging via a 1.27 mm pitch connector.Power SwitchPower Toggle ON/OFF: Toggle ON to power on the board and OFF to power off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial	Reserved IO Connector	Connects the system power supply pins and some reserved module pins via a
ESP-Prog ConnectorConnects the Program interface of ESP-Prog for firmware download and de- bugging via a 1.27 mm pitch connector.Power SwitchPower Toggle ON/OFF: Toggle ON to power on the board and OFF to power off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial		2.54 mm pitch connector.
bugging via a 1.27 mm pitch connector.Power SwitchPower Toggle ON/OFF: Toggle ON to power on the board and OFF to power off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial	LED	Supports configuring the RGB LED display to indicate status or behavior.
Power SwitchPower Toggle ON/OFF: Toggle ON to power on the board and OFF to power off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial	ESP-Prog Connector	Connects the Program interface of ESP-Prog for firmware download and de-
off the board.USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial		bugging via a 1.27 mm pitch connector.
USB-to-USB PortProvides power to the entire system. It is recommended to use at least a 5V/2A power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial	Power Switch	Power Toggle ON/OFF: Toggle ON to power on the board and OFF to power
power adapter to ensure a stable power supply. Used for USB communication between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial		off the board.
between the PC side and the ESP32-C3-MINI-1 module.Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial	USB-to-USB Port	Provides power to the entire system. It is recommended to use at least a 5V/2A
Screen ConnectorConnects the 1.28" LCD subboard via a 2.54 mm pitch connector.Rotary Encoder SwitchFeatures both a 360° rotary encoder and a key switch to enable control of the on-screen GUI.Boot ButtonHolding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial		power adapter to ensure a stable power supply. Used for USB communication
Rotary Encoder Switch Features both a 360° rotary encoder and a key switch to enable control of the on-screen GUI. Boot Button Holding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial		between the PC side and the ESP32-C3-MINI-1 module.
on-screen GUI. Boot Button Holding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial	Screen Connector	Connects the 1.28" LCD subboard via a 2.54 mm pitch connector.
Boot Button Holding down the Boot key and momentarily pressing the Reset key initiates the firmware upload mode. Then you can upload firmware through the serial	Rotary Encoder Switch	Features both a 360° rotary encoder and a key switch to enable control of the
the firmware upload mode. Then you can upload firmware through the serial		on-screen GUI.
	Boot Button	Holding down the Boot key and momentarily pressing the Reset key initiates
port or USB.		the firmware upload mode. Then you can upload firmware through the serial
P ····································		port or USB.



Fig. 13: ESP32-C3-LCD-Ev-Board - Front (Click to Enlarge)

LCD Subboards The **ESP32-C3-LCD-Ev-Board_DB** subboard supports a 1.28" LCD screen with SPI interface and 240x240 resolution. The driver chip used for this screen is GC9A01.

Software Support The ESP32-C3-LCD-Ev-Board development framework is ESP-IDF. ESP-IDF is a FreeRTOSbased SoC development framework with a bunch of components including LCD, ADC, RMT, and SPI.

Start Application Development This section provides instructions on how to do hardware and software setup and flash firmware onto the board to develop your own application.

Required Hardware

- 1 x ESP32-C3-LCD-Ev-Board_MB
- 1 x LCD subboard
- 1 x USB 2.0 cable (standard Type-A to Type-C)
- 1 x PC (Windows, Linux, or macOS)

Note: Please make sure to use the appropriate USB cable. Some cables can only be used for charging, not for data transfer or program flashing.

Hardware Setup Prepare the board for loading of the first sample application:

- 1. Connect the LCD subboard to the LCD Board Connector.
- 2. Plug in the USB cable to connect the PC with the board.
- 3. The LCD lights up and you can start to interact with it.



Fig. 14: ESP32-C3-LCD-Ev-Board_DB - Front (Click to Enlarge)

Now the board is ready for software setup.

Software Setup To learn how to quickly set up your development environment, please go to Get Started > Installation.

For more software information on developing applications, please go to Software Support.

Hardware Reference This section provides more detailed information about the board's hardware.

GPIO Allocation The table below provides the allocation of GPIOs exposed on terminals of ESP32-C3-MINI-1 module to control specific components or functions of the board.

Pin	Pin Name	Function
1	GND	Ground
2	GND	Ground
3	3V3	Power supply
4	NC	No connection
5	IO2	Reserved
6	IO3	Reserved
7	NC	No connection
8	EN	Reset
9	NC	No connection
10	NC	No connection
11	GND	Ground

Table 2. Lot 52 C5 Min 1 Of 10 Milocation	Table 2:	ESP32-	-C3-MINI-1	GPIO	Allocation
---	----------	--------	------------	------	------------

continues on next page

Pin	Pin Name	Function	
12	IO0	LCD_SDA	
13	IO1	LCD_SCL	
14	GND	Ground	
15	NC	No connection	
16	IO10	LCD_CS	
17	NC	No connection	
18	IO4	LCD_D/C	
19	IO5	LCD_BL_CTRL	
20	IO6	ENCODER_B	
21	IO7	ENCODER_A	
22	IO8	LED	
23	IO9	BOOT, ENCODER_SW	
24	NC	No connection	
25	NC	No connection	
26	IO18	Reserved	
27	IO19	Reserved	
28	NC	No connection	
29	NC	No connection	
30	RXD0	RXD0	
31	TXD0	TXD0	
32-35	NC	No connection	
36-53	GND	Ground	

Table 2 - continued from previous page

Power Distribution The development board is powered via the USB-to-USB port:

Output system power supply:

Hardware Setup Options

Automatic Download There are two ways to put the development board into download mode.

- Press the Boot and Reset buttons. Release the Reset button first and then the Boot button.
- Controls the status of the EN and IO9 pins of the ESP development board by ESP-Prog.

Hardware Revision Details No previous revisions.

Sample Request Not available.

Related Documents Please download the following documents from the HTML version of esp-dev-kits Documentation.

- ESP32-C3 Datasheet
- ESP32-C3-MINI-1 Datasheet
- ESP Product Selector
- ESP32-C3-LCD_EV_Board-MB Schematics
- ESP32-C3-LCD_EV_Board-MB PCB Layout
- ESP32-C3-LCD_EV_Board-DB Schematics
- ESP32-C3-LCD_EV_Board-DB PCB Layout

For further design documentation for the board, please contact us at sales@espressif.com.



Fig. 15: ESP32-C3-LCD-Ev-Board_DB - Back (Click to Enlarge)



Fig. 16: ESP32-C3-LCD-Ev-Board - USB-to-USB Power Supply



Fig. 17: ESP32-C3-LCD-Ev-Board - System Power Supply



Chapter 4

Related Documentation and Resources

4.1 Related Documentation

- ESP32-C3 Datasheet –Specifications of the ESP32-C3 hardware.
- ESP32-C3 Technical Reference Manual –Detailed information on how to use the ESP32-C3 memory and peripherals.
- ESP32-C3 Hardware Design Guidelines –Guidelines on how to integrate the ESP32-C3 into your hardware product.
- ESP32-C3 Product/Process Change Notifications (PCN) https://espressif.com/en/support/documents/pcns?keys=ESP32-C3
- ESP32-C3 Advisories –Information on security, bugs, compatibility, component reliability. https://espressif.com/en/support/documents/advisories?keys=ESP32-C3
- Certificates
 https://espressif.com/en/support/documents/certificates
- Documentation Updates and Update Notification Subscription
 https://espressif.com/en/support/download/documents

4.2 Developer Zone

- ESP-IDF Programming Guide for ESP32-C3 –Extensive documentation for the ESP-IDF development framework.
- ESP-IoT-Solution Programming Guide Extensive documentation for the ESP-IoT-Solution development framework.
- ESP-FAQ A summary document of frequently asked questions released by Espressif.
- ESP-IDF and other development frameworks on GitHub. https://github.com/espressif
- ESP32 BBS Forum –Engineer-to-Engineer (E2E) Community for Espressif products where you can post questions, share knowledge, explore ideas, and help solve problems with fellow engineers. https://esp32.com/
- The ESP Journal –Best Practices, Articles, and Notes from Espressif folks. https://blog.espressif.com/
- See the tabs SDKs and Demos, Apps, Tools, AT Firmware. https://espressif.com/en/support/download/sdks-demos

4.3 **Products**

- ESP32-C3 Series SoCs –Browse through all ESP32-C3 SoCs. https://espressif.com/en/products/socs?id=ESP32-C3
- ESP32-C3 Series Modules –Browse through all ESP32-C3-based modules. https://espressif.com/en/products/modules?id=ESP32-C3
- ESP32-C3 Series DevKits –Browse through all ESP32-C3-based devkits. https://espressif.com/en/products/devkits?id=ESP32-C3
- ESP Product Selector –Find an Espressif hardware product suitable for your needs by comparing or applying filters.

https://products.espressif.com/#/product-selector

4.4 Contact Us

• See the tabs Sales Questions, Technical Enquiries, Circuit Schematic & PCB Design Review, Get Samples (Online stores), Become Our Supplier, Comments & Suggestions. https://espressif.com/en/contact-us/sales-questions

Chapter 5

Disclaimer and Copyright Notice

Information in this document, including URL references, is subject to change without notice.

All third party's information in this document is provided as is with no warranties to its authenticity and accuracy.

No warranty is provided to this document for its merchantability, non-infringement, fitness for any particular purpose, nor does any warranty otherwise arising out of any proposal, specification or sample.

All liability, including liability for infringement of any proprietary rights, relating to use of information in this document is disclaimed. No licenses express or implied, by estoppel or otherwise, to any intellectual property rights are granted herein.

The Wi-Fi Alliance Member logo is a trademark of the Wi-Fi Alliance. The Bluetooth logo is a registered trademark of Bluetooth SIG.

All trade names, trademarks and registered trademarks mentioned in this document are property of their respective owners, and are hereby acknowledged.